

LKP500-EN Lyric Keypad Commands

Basic Commands

Bypass Faulted Zones – Can only be done upon arming. Force Bypass must be enabled in panel before it this will work. If zones are faulted and you press ‘Away’ or ‘Stay’ and enter user code, press ‘Select’ (1), all zones will bypass and the system will arm.

Arm Away – Press ‘Away’, then enter user code.

Arm Stay – Press ‘Stay’, then enter user code.

Quick Arm – Quick Arm must be enabled in panel programming before this will work. Press and hold ‘Security’ for 3 seconds, then select ‘Away’ or ‘Stay’.

Disarm – Press ‘Security’, then type in user code.

Status Request – Press ‘Status’.

Panic – Hold the Panic for 3 seconds, then press the Fire, Police, or Medical panic.

User Settings (Chime, Exit/Entry Tone, Voice Volume, Key Level, Display Level, Backlight)

1. Press and hold the ‘Select’ (1) key until the menu begins.
2. Use the ‘Scroll’ (0) key to scroll the settings.
3. Use the ‘Select’ key to choose the desired menu item.
4. Use the ‘Scroll’ key to toggle the menu options.
5. Press the ‘Select’ key to choose an option.

‘Cancel’ (Away) cancels the current entry and returns to Status display.

(Brackets [] indicate default values and the greater than symbol “>” on keypad display indicates keypad’s current setting)

Installer Settings (Firmware, Default, Reset)

1. Press and hold the [3] key until “Advanced Menu Use Scroll Key” is displayed.
2. Use the ‘Scroll’ [0] key to scroll the menus = Firmware, Default, Reset
3. Use the ‘Select’ key to choose the desired menu item.
4. Use the ‘Scroll’ key to view the information.

-- Press ‘Cancel’ at any time to exit the menu

View Firmware Version

Press and hold the [3] key until “Advanced Menu Use Scroll Key” is displayed. Press the ‘Scroll’ [0] key to scroll to Firmware, press ‘Select’ (1) to select, press 0 to scroll through:

App (version level)

Touch (touch screen version)

Boot (boot loader version)

RF6 (comm. protocol)

MAC (MAC ID)

Press ‘Cancel’ to exit

Reset Keypad

Press and hold the [3] key until “Advanced Menu Use Scroll Key” is displayed. Press the ‘Scroll’ (0) key to scroll to “Reset Keypad”, press ‘Select’ (1) to select, and press ‘Select’ (1) to reset or press ‘Cancel’.